



SKU 228 and 228-2

For use with PetStep Folding Ramps SKU 222G and 222K

Pool Leg Installation Instructions

WHAT'S INCLUDED:



Cross Brace and
Locking Braces



Thumb Screws - 12



Pool Ramp
Legs - 2

INSTRUCTIONS (read completely before your begin):



STEP ONE - SECURE LEGS TO THE RAMP

Use the bag of six thumb screws to secure the pool legs to the underside of the PetStep ramp. **(Do not overtighten the screws using pliers or other tools.)**



Align the three (3) predrilled holes on the pool leg with the three screw inserts on the bottom edge of the ramp. The legs should be leaning away from the ramp.



Insert three of the thumb screws into the aligned holes and hand tighten them to secure the pool leg.



Repeat the previous two steps with the second pool leg on the other set of three screw inserts to secure it.



STEP TWO - ADD THE CROSS-BRACE

Use the two thumb screws to fasten the cross-brace across the installed pool legs.



Align the predrilled holes on the cross-brace with the threaded screw inserts on each of the legs.




Insert a thumb screw into the aligned screw insert and tighten it to secure the cross-brace.



Fasten the cross-brace to the other pool leg with the remaining gray thumb screw.


(continued)

(continued)

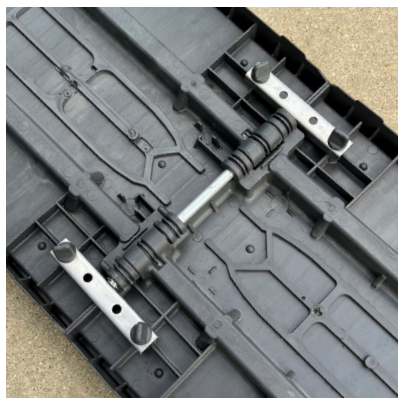

STEP THREE - ADD THE LOCKING BRACE KIT

Place a locking brace over each side of the ramp's hinge, using two thumb screws to secure each.

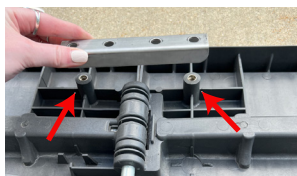

Align the two screw inserts on either side of the ramp hinge with the outermost holes on the locking brace.



Place the locking brace with the U-channel facing downwards over the screw inserts. Use two thumb screws to secure it.



Repeat the previous two steps to secure the second locking brace to the other side of the ramp hinge.

After installing the pool legs and locking brace kit, your PetStep ramp is ready to go in the pool! One person can put the ramp in the pool, but we recommend having someone else help you place the ramp. Lift the ramp up from the ground and flip it so that the top of the ramp is facing upwards and the pool legs downwards. Place the ramp in your pool, pool legs first. Position the ramp as needed to ensure that the rubber grips on the top of the ramp are resting on the edge of your pool. Initially, your ramp may float in your pool. Once the legs fill with water, your pool ramp will have a stable base and will be ready to use.

Now your pup can enjoy the pool!



"Now that I can get in and out of the pool, I can teach my humans to doggie paddle!"